Neat Bar Pro & Neat Pad Guide

Overview of Equipment

The Neat Bar Pro and Neat Pad are meeting devices used in conjunction with Zoom. The Neat Pad controls the Zoom functions like a computer. The Neat Bar is an external camera, speaker and microphone.

Using the Samsung Monitors

1. Remove the "Syantek" remote from the holder on the wall and turn on 1, 2 & 3.

Using the Neat Pad

- Using the ethernet cable provided, plug the Neat Pad tablet into the data port on the wall under the mini-split HVAC unit labeled "Neat Pad."
- 2. If another account is already signed in, select "Settings" \rightarrow "General" \rightarrow "Sign out."
- 3. Sign into the Zoom account where the meeting is scheduled using "Email".
- 4. On the left-hand column, you can choose from the list of scheduled Zoom Meetings. Select "Start" to begin.
- 5. To **enter a meeting**, select "Join" → "Enter passcode."
- 6. To **obtain the meeting** ID for others after you have joined a meeting, select "Invite" → Email
 - a. Read the meeting ID number in the invite or enter an email address field and choose "Send."
- 7. To admit participants, select "Participants," and choose the blue "Admit" option. If you want to edit any of the participants' privileges, tap on their name and the selection menu will pop up.
 - a. You may unmute/mute participants in this window as well.
- 8. When finished with your meeting, please sign out. Select "Settings" \rightarrow "General" \rightarrow "Sign out."

Note: To adjust the camera, select "Camera Control." Select "Auto-Framing" and turn on "Multifocus Framing" so the Neat device can individually frame each participant and place them side-by-side. This may assist remote participants with identifying and hearing speakers from the group present in person.

Powering Off All Devices

Turn off 1, 2 & 3 on the "Syantek" remote and return the holder on the wall. Unplug the Neat pad and return to storage.

For further information on using the Neat Pad, please visit: https://storage.googleapis.com/cdn-stories.neat.no/1/2022/08/Neat-ZR-Controller-Guide-5.10.pdf



(Neat Pad guide)